

Balston OEM Disposable Filter Solutions



Balston Disposable Filter Units

Ideal for the following gas filtration applications:

- Final filter for air logic devices
- Protection of pneumatic components
- Filtration of portable environmental sampling devices
- Filtration of samples to on-line analyzers
- Protection of Pneumatic temperature controls

Ideal for the following liquid filtration applications:

- Filtration of liquid with minimum holdup volume
- Filtration of liquid samples to analyzers

Additional applications in the following industries:

- Instrument & Controls
- HVAC
- Dental
- Automotive
- Food Packaging

Parker Hannifin Corporation, the leader in separation and filtration technologies, is pleased to present a brochure designed to help OEM customers choose the best Balston disposable filter product for industrial, commercial, measurement and control applications.

Balston brand disposable filter units (DFU) consist of a microfibre filter cartridge permanently bonded into a sealed plastic holder with 125 psig pressure ratings, temperatures to 275°F, and available in low and high flow models. The economical DFU offers all of the advantages of microfibre filter cartridges for high efficiency liquid and gas filtration, combined with the economics and convenience of complete disposability.


Our years of experience in fitting products to individual applications has led to the creation of a variety of standard products that can be ordered off the shelf for general purpose filtration requirements or can be custom designed for all types of specialty applications.

If you do not see the specific configuration, size or material that you are looking for, our OEM engineering team will be happy to review your requirements and design product to your exact specifications.

If you have questions, or would like to place an order, please call 1-800-343-4048.

Filter Cartridge and Housing Selection

Miniature General Purpose

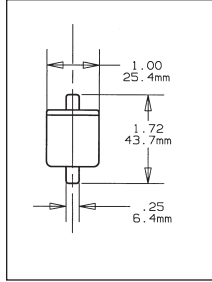

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume:	.004L

Ordering Information

A9933-03-□ Box of 100 bulkpack
 C9933-03-□ Box of 500 bulkpack
 Available in Type U and grades A, B, C and D.
 See pages 55-58 for detail of types, grades, application, and installation information.

Model 9933-03

General Purpose - Minimal Length

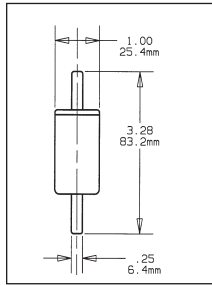

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume:	.01L

Ordering Information

A9930-05-□ Box of 100 bulkpack
 C9930-05-□ Box of 500 bulkpack
 Available in Type U and in the following grades: A, B, C, D
 See pages 55-58 for detail of types, grades, application, and installation information.

Model 9930-05

General Purpose DFU - Low Flow Gas

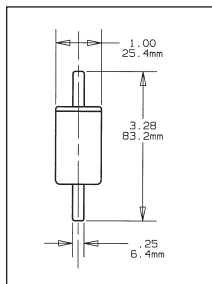

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume:	.01L

Ordering Information

A9933-05-□ Box of 100 bulkpack
 C9933-05-□ Box of 500 bulkpack
 Available in Type U and in the following grades: A, B, C, D. Also available with adsorbents 000, 101, 103, 107.
 See pages 55-58 for detail of types, grades, application, and installation information.

Model 9933-05

General Purpose DFU - Higher Flow

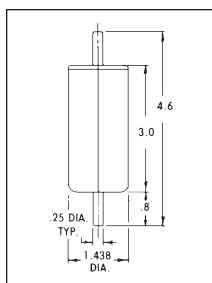

Specifications

Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume:	.02L


Ordering Information

A9933-11-□ Box of 100 bulkpack
 C9933-11-□ Box of 500 bulkpack
 Available in Type U and in the following grades: A, B, C, D. Also available with adsorbents 000, 101, 103, 107.
 See pages 55-58 for detail of types, grades, application, and installation information.

Model 9933-11

Filter Cartridge and Housing Selection

General Purpose for Gases - Highest Flow

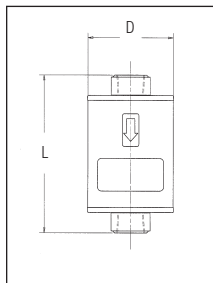

Model 7825


Specifications

Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	125°F (52°C)
Inlet / Outlet Ports:	1/4" FNPT
Drain:	None
Housing Material of Construction:	PolyPropylene
L= Length:	Available 6", 8", 10", 12"
D= Diameter:	2.5"

Ordering Information

A7825-□□-□□□□ Box of 100 bulkpack
 C7825-00-000 Box of 500 bulkpack
 Available in Type Q and in the following grades: A, B, C, D. Also available with adsorbents 000, 101, 103, 107. Please consult OEM Technical Support for information on flow rates for these configurations. 3/8" NPT, 3/8" and 1/4" Tube Quick Disconnect are available upon request.

General Purpose for Liquids - Highest Flow

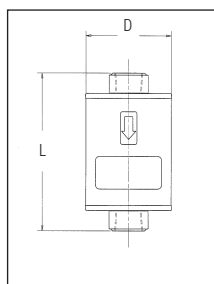

Model 7825


Specifications

Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	125°F (52°C)
Inlet / Outlet Ports:	1/4" FNPT
Drain:	None
Housing Material of Construction:	Polypropylene
L= Length:	Available 6", 8", 10", 12"
D= Diameter:	2.5"

Ordering Information

A7825-□□-□□□□ Box of 100 bulkpack
 C7825-□□-□□□□ Box of 500 bulkpack
 Available with integral liquid cartridge in grades ranging from 75 micron to .22 micron at 80% efficiency rating. Please consult OEM Technical Support for information on flow rates for these configurations. 3/8" NPT, 3/8" and 1/4" Tube Quick Disconnect are available upon request.

General Purpose with Integral Barb Fittings

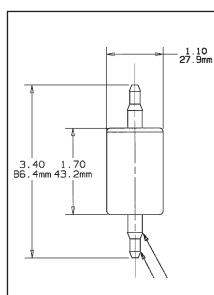

Model 4433-05


Specifications

Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1st Tier: 1/4" Tube 2nd Tier: 3/8" Tube
Drain:	None
Material of Construction:	Nylon
Internal Volume:	.01L

Ordering Information

A4433-05-□ Box of 100 bulkpack
 C4433-05-□ Box of 500 bulkpack
 Available in Type U and in grades: A, B, C and D
 See pages 55-58 for detail of types, grades, application, and installation information.

General Purpose with Drain Port

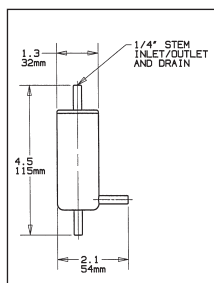

Model 8833-11

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	1/4" Tube
Housing Material of Construction:	Nylon
Internal Volume:	.02L

Ordering Information

A8833-11-□ Box of 100 bulkpack
 C8833-11-□ Box of 500 bulkpack
 Available in Types U and X and in the following grades: A, B, C, D, S. Also available with adsorbents 000, 101, 103, 107. See pages 55-58 for detail of types, grades, application, and installation information.

Filter Cartridge and Housing Selection

High Chemical Resistance - Low Flow

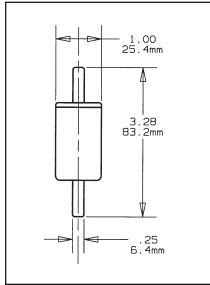

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	275°F (135°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	PVDF
Internal Volume:	.01L

Ordering Information

A9922-05-□ Box of 100 bulkpack
 C9922-05-□ Box of 500 bulkpack
 Available in Type Q and in the following grades: A, B, C, D. Also available with adsorbents 000, 101, 103, 107.
 See pages 41-44 for detail of types, grades, application, and installation information.

Model 9922-05

High Chemical Resistance DFU -Higher Flow

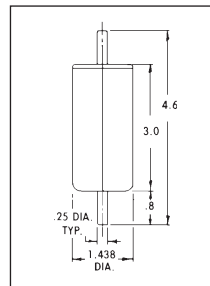

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	275°F (135°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	PVDF
Internal Volume:	.02L

Ordering Information

A9922-11-□ Box of 100 bulkpack
 C9922-11-□ Box of 500 bulkpack
 Available in Types Q and in the following grades: A, B, C, D
 See pages 41-44 for detail of types, grades, application, and installation information.

Model 9922-11

Oil Indicating DFU

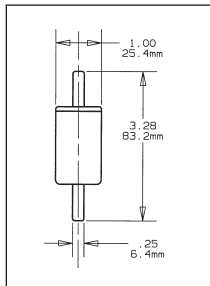

Specifications


Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1/4" Tube
Drain:	None
Housing Material of Construction:	Nylon
Internal Volume:	.01L

Ordering Information

A9900-05-□ Box of 100 bulkpack
 C9900-05-□ Box of 500 bulkpack
 Available in Type K and in grade B.
 See pages 41-44 for detail of types, grades, application, and installation information.

Model 9900-05

General Purpose with Integral Barb Fittings - For Less Critical Applications

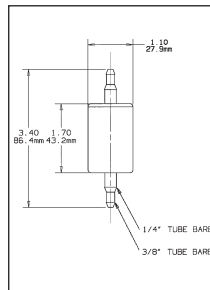

Specifications

Max. Pressure at 110°F:	125 psig
Max. Temp. at 0 psig:	230°F (110°C)
Inlet / Outlet Ports:	1st Tier: 1/4" Tube 2nd Tier: 3/8" Tube
Drain:	None
Material of Construction:	Nylon
Internal Volume:	.01L

Ordering Information

A4433-05-10P Box of 100 bulkpack
 C4433-05-10P Box of 500 bulkpack
 Retention efficiency of plastic filter element is 100 micron nominal.

Model 4433-05-10P

Filter Cartridge and Housing Selection



Disposable Adsorption Units (DAUs) contain a bed of adsorbent granules. Utilizing a wide choice of adsorbents, the DAUs selectively remove vapors from air and other gases.

Because the adsorbed vapor remains trapped in the solid bed, the DAU has a fixed upper limit of total weight of vapor which can be captured. It is usually not feasible to regenerate the filter when it has reached its adsorption limit. DAUs should be used only when small quantities of vapor are to be removed.

Considerations in Using Adsorbent Cartridges

The following factors should be considered when selecting a DAU:

- 1 Solid adsorbents are effective only for vapors. Since liquids will damage or inactivate most solid adsorbents, the DAU must be preceded by an efficient coalescing filter.
- 2 In contrast with Microfibre Filters, which operate at their initial efficiency throughout their life, adsorbent cartridges have a limited holding capacity. When the adsorption capacity is reached, no further adsorption occurs. The limiting capacity, or "breakthrough" point, is not sharply defined, and the exit vapor concentration will increase rapidly as saturation is approached. To avoid unwanted vapor contaminants downstream, it is necessary to change the adsorbent cartridge well before it has reached its ultimate adsorption capacity.
- 3 Adsorption is reversible, if operating conditions change, a vapor may desorb rather than adsorb. For example, if a temporary surge in vapor impurity concentration causes a relatively high concentration to be adsorbed on the solid, a subsequent decrease in inlet vapor composition will result in desorption of vapor from the solid to the gas stream.
- 4 The efficiency of a given adsorbent for a given vapor depends upon the specific operating conditions. Therefore, again in contrast to filtration, it is not possible to assign a single efficiency rating to an adsorbent. While it is not possible to predict or guarantee an adsorption efficiency for any specific set of conditions, it is possible to enhance the conditions beneficial to adsorption and avoid conditions which interfere with adsorption. Conditions which aid adsorption are: low temperature, high pressure, low flow rate, and absence of competing vapors (particularly water vapor).


Adsorbent	Grade	Use For
Carbon	000	Compressor oil vapors, C ₅ and heavier hydrocarbons, aromatics, oxygenated hydrocarbons, chlorinated organics, freons, carbon disulfide.
Silica Gel	101	Recommended only for water vapor.
Molecular Sieve Type 13X	103	Most C ₄ and lighter hydrocarbons, ethylene, propylene, acetylene, ethylene oxide, ammonia, mercaptans, sulfur hexafluoride, triethylamine, and smaller amines.
Mixed Sodium & Calcium Hydroxides	107	All acidic gases, including sulfur trioxide, sulfur dioxide, nitrogen dioxide, carbon dioxide, hydrogen sulfide, hydrogen chloride, phosphorus trichloride, boron trifluoride.

Notes:

- 1 Please refer to Ordering Information for complete explanation of nomenclature.
- 2 In DAU 9933-05-107 and DAU 9933-11-107, color indicator turns violet when adsorbent is spent.
- 3 In DAU 9933-05-101 and 9933-11-101, adsorbent turns pink when vapor capacity is reached.
- 4 Maximum operating temperature is 180°F.

How to Specify your Balston DFU/DAU

The Chart below illustrates how to configure the DFU part number when ordering.

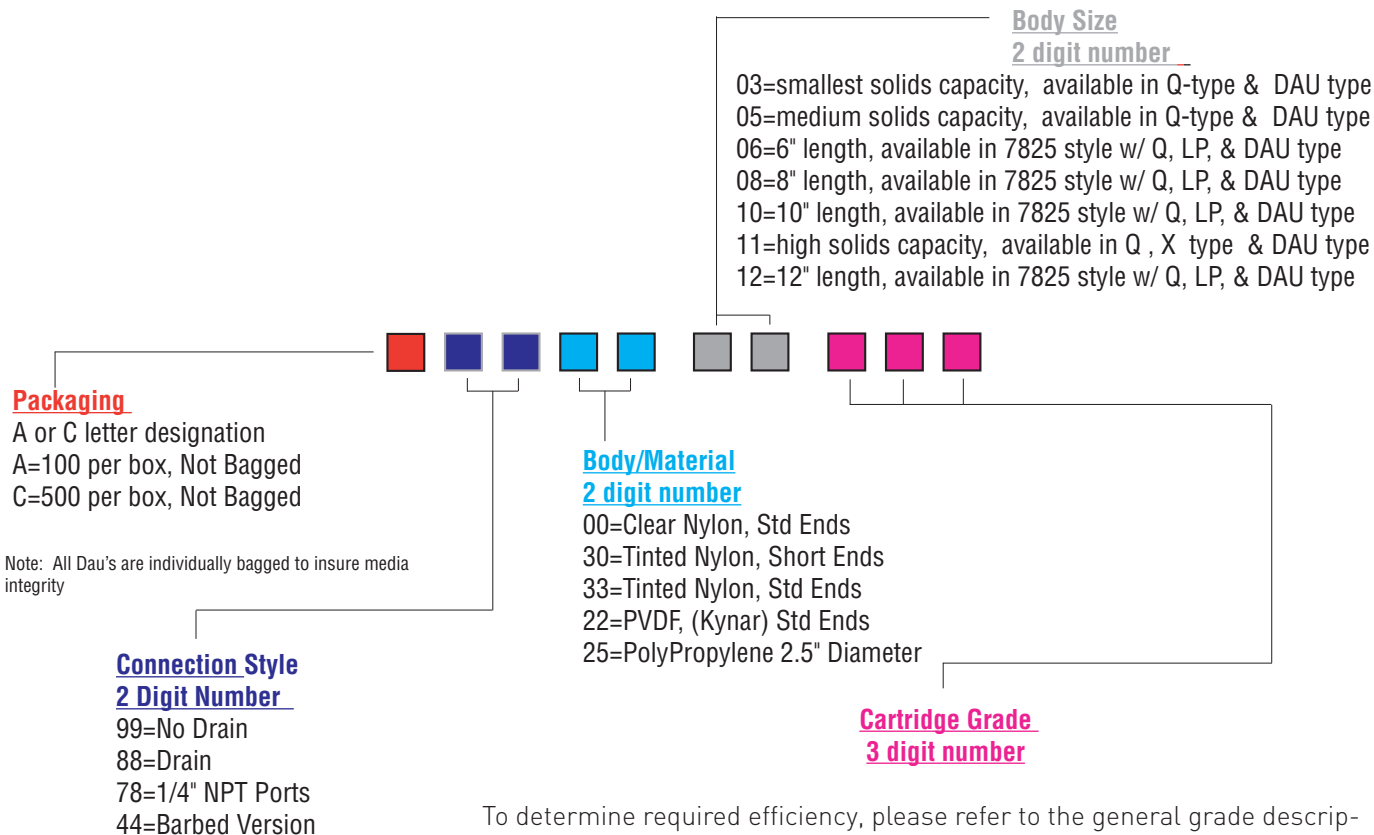

To determine required efficiency, please refer to the general grade description flow rate information. When selecting X or Q type cartridges, A, B, C, or D positioned before the cartridge type will determine the retention efficiency. When selecting cartridge type, do not overspecify. Select the coarsest grade which is adequate for the application. Coarser Grade filters provide lower pressure drop and longer life than finer filters. When selecting DAU grades refer to the chart on page 5 to determine the adsorbent appropriate for the application.

Specify your part number with the above guidelines. Please refer to pages 38-40 to confirm the grades, sizes and materials available in each housing type.

Custom configurations, Private labelling available-Please Ask for a quote!! We will happily engineer product to your specific requirements

Call 800-343-4048 to place your order.

We would be pleased to answer all of your technical questions. Our technical staff is available from 8am-5pm Eastern Time.

Technical Specifications

Filtration Efficiency

The Balston® Microfibre® Disposable Filter Unit (DFU) may be used to filter liquids or gases; therefore, each DFU has two retention ratings. Liquid ratings are defined as 98% retention of the stated particle size; gas ratings are defined as percentage retention of 0.01 micron particles.

Retention Efficiency Grade	Gas Efficiency (at .01µm)	Liquid Efficiency (98% retention)
DQ,DX, DU	93%	25 µm
CQ, CU	98%	8 µm
BQ,BK,BX, BU	99.99%	2 µm
AQ	99.9999+%	0.9 µm

Note: Consult OEM Technical Support for information on flow rates for 8", 10", and 12" lengths.

Pressure Drop Specification	Models 8822-11, 9922-05, 9922-11	Models 9900-05, 4433-05, 8833-11, 9933-05, 9933-11, 7825
Max. DP:		
Gases		
• Flow per arrow	80 psid	50 psid
• Flow opposite arrow	20 psid	20 psid
Liquids		
• Flow per arrow	50 psid	50 psid
• Flow opposite arrow	20 psid	20 psid

DFU Type	Air Flow at 2 psi drop, standard cu. ft. per min. (SCFM) at indicated line pressure						
	2 psig	20 psig	40 psig	60 psig	80 psig	100 psig	125 psig
8833-11-DX, DU	1.8	3.6	5.8	8.0	10.0	12.0	14.6
9922-11-DQ							
9933-11-DU							
8833-11-BX, BU	0.9	1.8	2.9	4.0	5.0	6.0	7.3
9922-11-BQ							
9933-11-BU							
9933-05-DU	1.2	2.5	3.9	5.4	6.8	8.3	10.1
9922-05-DQ							
4433-05-DU							
4433-05-10P							
9933-05-BU	0.8	1.6	2.6	3.6	4.4	5.4	6.6
9922-05-BQ							
9900-05-BK							
9933-03-DU	0.6	1.25	1.9	2.7	3.4	4.1	5.1
9933-03-BU	0.4	0.8	1.3	1.8	2.2	2.7	3.3
9933-11-DAU	0.7	1.7	2.5	3.7	4.3	5.0	5.7
9922-11-DAU							
9933-05-DAU	0.5	1.2	1.9	2.6	3.3	4.0	4.7
9922-05-DAU							
4433-05-DAU							
8833-11-AQ	0.45	0.9	1.8	2.0	2.5	3.0	3.8
9922-11-AQ							
9933-05-AQ	0.4	0.8	1.3	1.8	2.2	2.7	3.3
9922-05-AQ							
7825-06-BQ	3.5	7.1	10.4	13.0	16.25	17.55	20.1
7825-06-DQ	5.0	11.0	16.0	20.0	25.0	27.0	31.0
7825-06-DAU	3.5	7.25	10.3	13.0	15.5	17.3	19.5

Chemical Compatibility, Models 9922-05, 9922-11 Polyvinylidene fluoride (PVDF), opaque



Suitable: Water (to 200°F/135°C); concentrated nitric, sulfuric, and hydrochloric acids; chlorine (gas or liquid); sodium hypochlorite; ethylene oxide (gas or liquid); Freons; hydrogen peroxide (all concentrations); bromine (dry and aqueous solutions); all chlorinated solvents except methylene chloride; all aromatic and aliphatic solvents; all alcohols and glycols; aniline; phenol; ammonia (gas, liquid, or aqueous).

Limited Use: Acetone MEK, Dioxane, furfural, methylene chloride.

Unsuitable: THF, DMF, ethylene diamine, chlorosulfonic acid, ethanolamine, pyridine, sulfur trioxide.

Chemical Compatibility, Models 9900-05, 8833-11, 9933-05, 9933-11, 4433-05 - Nylon, clear

Suitable: Water (to 158°F/70°C); benzene, toluene, other aromatic hydrocarbons; hydrocarbon solvents and fuels; perchloroethylene; trichloroethylene; nitric acid (to 10%); sulfuric acid (to 40%); hydrochloric acid (to 10%); most salt solutions; sodium and potassium hydroxide (to 50%).

Limited Use: Water at 176°F (80°C); acetone; MEK; acetaldehyde; ammonia (to 25%).

Unsuitable: Water (above 194°F/90°C), alcohols, glycols, phenol, aniline, DMF, concentrated acids, chlorine.

Filter Cartridge and Housing Selection

General Description

K Type Filter: Designed with integral dye to indicate presence of oil. Polyolifin binder with borosilicate glass fibers. Available in style 9900-05.

LP Filter: Designed to filter liquids with high solids contents. Have an integral prefilter and an external support structure (flow direction is inside to outside). Available in style 7825 only. Polyolifin binder with glass borosilicate fibers.

X-Type Filter: Used for solids and relatively large amounts of suspended liquids in gases. Provide excellent chemical resistance, temperature resistance to 300°F and good mechanical handling properties. These cartridges have thick walls for coalescing efficiency. Fluorocarbon Resin Binder available in style 8833-11 DFU's.

P-Type Filter: Used for less critical applications. 100 Micron nominal rated plastic filter element. Available in style 4433-05 only.

Q-Type Filter: Used for solids and trace amounts of liquids in gases. Similar to X-type cartridges in chemical and temperature resistance. Fluorocarbon Resin Binder. Available in 9922-05, 9922-11 styles.

U Type Filter: Used for solids and trace amounts of liquids in gases. Specifically designed to have same chemical and temperature resistance as nylon, plastic housings. Polyolifin binders with borosilicate glass fiber that produces pure white filter media. Available in styles 4433-05, 9933-05, 9933-11.

DAU Grades: Please see page 55 for complete description.

Recommended Grade

Gas Filtration		Liquid Filtration (select particle and size retention)	
Grade DQ,DX	General Purpose	Grade DQ,DX	General Purpose
Grade BQ,BK,	Complete oil and/or water droplet removal Note: Grade BK contains a visual oil indicator which turns a portion of the surface of the cartridge pink when saturated with oil.	Grade CQ	Removes almost all visible particles
		Grade BQ,BX	Removes all visible particles and most colloidal haze
Grade AQ	Commercially sterile	Grade AQ	All submicron particles
		Grade AAQ	All submicron particles

Installation Instructions

Primary flow should be in the direction of the arrow (inside-to-outside of the filter cartridge). Moderate reverse flow can be tolerated without damage, as in a vent or breather application. Slip-on tubing (1/4" ID) may be used for low pressure applications. For high pressure applications, compression tubing fittings recommended by the manufacturers for use with 1/4" OD plastic tubing are satisfactory to 125 psig. Consult OEM Technical Support for information on Parker Hannifin tube fittings, regulators, valves etc. (Call Parker at 1-800-343-4048, 8AM to 5PM Eastern Time.)

Notes:

1 DFU 9933-05-AQ (or others with Nylon housings) may be sterilized with ethylene oxide or by autoclaving to 230°F. For autoclaving to 275°F, use DFU 9922-05-AQ (or others with PVDF housings).

For connections to pressure pipe or tubing		For connections to low pressure plastic tubing	
Compression fittings for 1/4" O.D. tubing may be obtained from Parker-Hannifin Corp. The following brass fittings seal by o-ring compression and may be completely recovered and reused when changing filters. They may be purchased from Parker Hannifin Corporation. Connector 1/4" tubing to 1/4" NPT, female - P/N 11970 Connector 1/4" tubing to 1/4" tubing - P/N 11971		Tubing with 1/4" ID may be slipped over the DFU end fittings and held with tubing clamps. Plastic barbs are available to connect the DFU to smaller diameter plastic tubing. The connection is suitable for pressures to 50 psig. DFU to 1/16" ID tubing P/N 14000 (bag of 20 barbs) DFU to 1/8" ID tubing P/N 14001 (bag of 20 barbs)	
Elbow	1/4" tubing to 1/8" NPT female (for manual drain on Type 8833-11) - P/N 11972	Parker offers a manual drain valve for removal of coalesced liquids from the Type 8833-11-DX. Drain Valve	1/8" NPT (male) x 1/8" ID tubing (Requires elbow part 11972) P/N 20125

North America

Engine Filtration

Parker Hannifin Corporation
Racor Division
3400 Finch Road
P.O. Box 3208
Modesto, CA 95354
phone 209 521 7860
fax 209 529 3278
www.parker.com/racor

Parker Hannifin Corporation
Racor Division
P.O. Box 6030
Holly Springs, MS 38635
phone 662 252 2656
fax 662 274 2118
www.parker.com/racor

Parker Hannifin Corporation
Racor Division
302 Parker Drive
Beaufort, SC 29906
phone 843 846 3200
fax 843 846 3230
www.parker.com/racor

Compressed Air Treatment

Parker Hannifin Corporation
Filtration and Separation Division
Balston Operation
242 Neck Road
Haverhill, MA 01835-0723
phone 978 858 0505
fax 978 556 7501
www.balstonfilters.com

Parker Hannifin Corporation
Filtration and Separation
Finite Filter Operation
500 Glaspie Street
P.O. Box 599
Oxford, MI 48371-5132
phone 248 628 6400
fax 248 628 1850
www.parker.com/finitefilter

Parker Hannifin Corporation
Airtek Division
4087 Walden Avenue
Lancaster, NY 14086
phone 716 685 4040
fax 716 685 1010
www.airtek.com

Hydraulic Filtration

Parker Hannifin Corporation
Hydraulic Filter Division
16810 Fulton County Road #2
Metamora, OH 43540-9714
phone 419 644 4311
fax 419 644 6205
www.parker.com/hydraulicfilter

Process Filtration

Parker Hannifin Corporation
Process Advanced Filtration
2340 Eastman Avenue
Oxnard, CA 93030
phone 805 604 3400
fax 805 604 3401
www.parker.com/processfiltration

Europe

Engine Filtration

Parker Hannifin Corporation
Filter Division Europe
Shaw Cross Business Park
Churwell Vale
Dewsbury, WF12 7RD England
phone +44 (0) 1924 487000
fax +44 (0) 1924 487038
www.parker.com/rfde

Compressed Air Treatment

Parker Hannifin Corporation
domnick hunter industrial operations
Dukesway, Team Valley Trading Estate
Gateshead, Tyne & Wear
England NE11 0PZ
phone +44 (0) 191 402 9000
fax +44 (0) 191 482 6296
www.domnickhunter.com

Parker Hannifin Corporation
Parker Hiross S.p.A.
Strada Zona Industriale, 4
35020, S. Angelo di Piove(PD), Italy
phone +39 049 9712 111
fax +39 049 7001 111
www.dh-hiross.com

Parker Hannifin Corporation
ZANDER Aufbereitungstechnik GmbH
Stammhaus Essen/Headquarter
Germany, Essen
Im Teelbruch 118
45219 Essen
phone +49 (0) 20 54 93 40
fax +49 (0) 20 54 93 41 64
www.zander.de

Hydraulic Filtration

Parker Hannifin Corporation
Hydraulic Filtration Division Europe
Stieltjesweg 8, 6827 BV Arnhem
P.O. Box 5008 6802 EA, Arnhem
Arnhem, Holland
phone +31 26 3760376
fax +31 26 3643620
www.parker.com/hfde

Parker Hannifin Corporation
Finn Filter Operation
Salmentie 260
FI-31700 Urjala as Finland
phone +358 20 753 2500
fax +358 20 753 2501
www.parker.com/hfde

Parker Hannifin Corporation
CMC Operation
Brunel Way
Thetford, Norfolk IP 24 1HP England
phone +44 1842 763299
fax +44 1842 756300
www.parker.com/hfde

Process Filtration

Parker Hannifin Corporation
domnick hunter process division
Durham Road, Birtley
Co. Durham, DH3 2SF England
phone +44 (0) 191 410 5121
fax +44 (0) 191 410 5312
www.domnickhunter.com

Parker Hannifin Corporation
280 YunQiao Road
JinQiao Export Processing Zone
Shanghai 101206 China
phone +86 21 5031 2525
fax +86 21 5834 3714
www.parker.com/china

Parker Hannifin Corporation
Lot 558A, Jalan Subang 3
Off Persiaran Subang
Sungai Penaga Industrial Park
47610 Subang Jaya
Selangor Darul Ehsan, Malaysia
phone +60 3 5638 1476
fax +60 3 5638 1527
www.parker.com/malaysia

Parker Hannifin Corporation
1023 3rd Floor, TPS Building
Pattanakam Road
Suanluang, Bangkok 10250 Thailand
phone +66 2717 8140
fax +66 2717 8148
www.parker.com/thailand

Parker Hannifin Corporation
777 Jung-Ri
Dongtan-Myeon, Hwaseong-City
Kyunggi-Do, 445-813 Korea
phone +82 31 379 2200
fax +82 31 377 9710
www.parker.com/korea

Parker Hannifin Corporation
Estrada Municipal Joel de Paula, 900
Eugenio de Melo, Sao Jose dos Campos
CEP 12225-390 SP Brazil
phone +55 (12) 4009 3500
fax +55 (12) 4009 3529
www.parker.com/br

© 2008, 2009 Parker Hannifin Corporation
Reprinted June 2009

Bulletin OEM-D

Parker Hannifin Corporation
Filtration and Separation Division
242 Neck Road, P.O. Box 8223
Haverhill, MA 01835-0723
1-978-858-0505
1-978-556-7501 fax
1-800-343-4048 (US & Canada)
www.balstonfilters.com

